


1. 將三通閥控制器控制箱放置於儲水槽上方 Place the chilling water control box on top of water trough.

背面 Back view

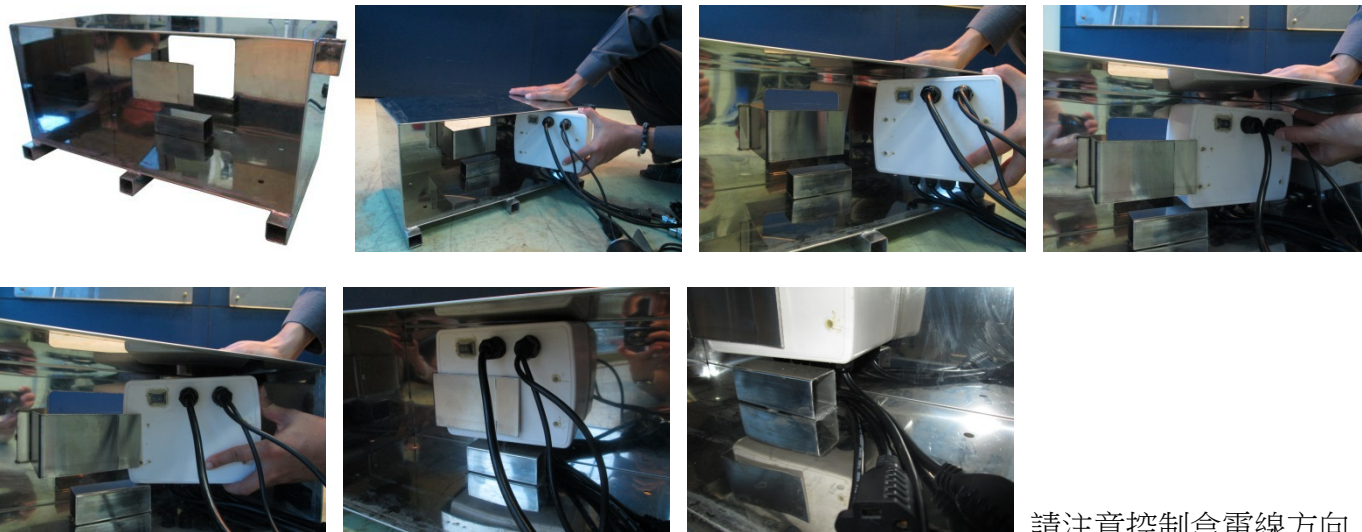


請注意控制盒電線方向

Pay attention to the direction of cables in the box.

正面 Front view


背面 Back view

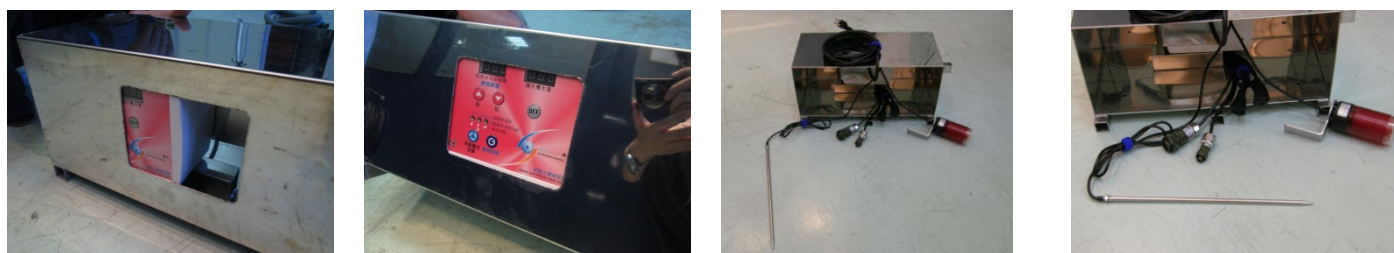


請將控制盒放在儲水槽上方。 Place the controller box on top of the water tank.



將溫度探針放入儲水槽中 Insert the temperature sensor into the water trough.

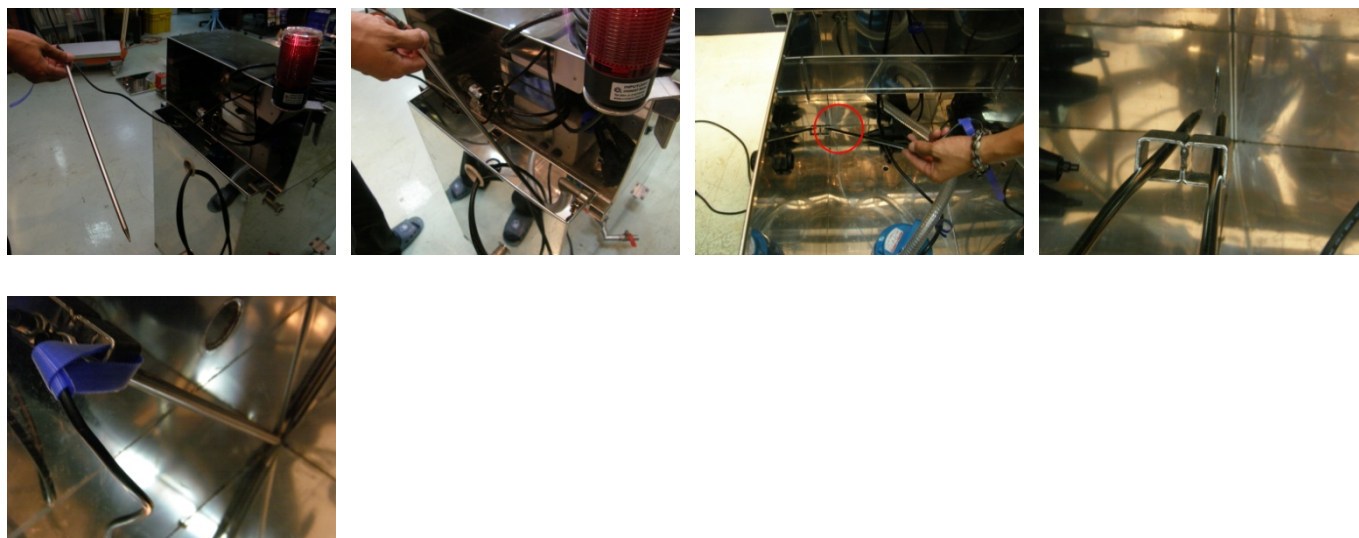


排水二通閥與進出水控制盒電源線連接 Connect auto two way valve to the controller.

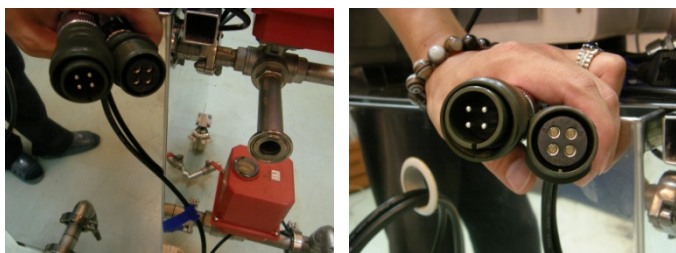

請注意，軍規接頭安裝時，請公母接頭請對齊。 Please pay attention to the alignment of male and female connectors.





三通閥與進出水控制盒電源線連接 Connecting auto three way valve to controller.

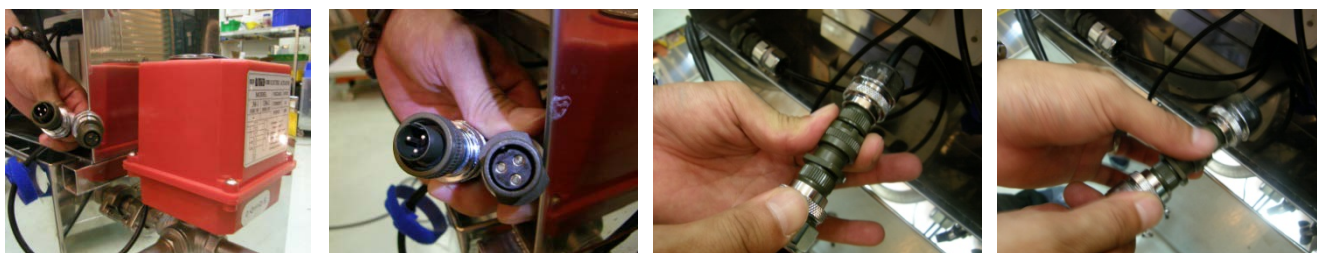

請注意，軍規接頭安裝時，請公母接頭請對齊。 Please pay attention to the alignment of male and female connectors.



儲水槽配備連接線說明 Introduction of different wires in ice water tank

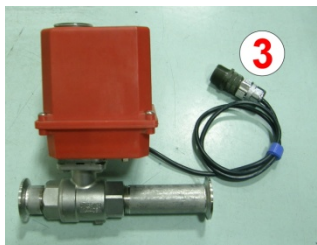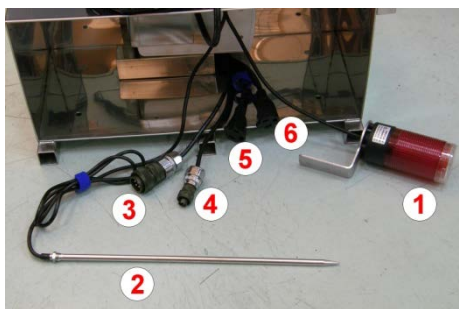

1	儲水槽溫度警示燈 Over temperature warning alarm.	4	三通閥連接線 Three way valve.
2	溫度探針 Temperature sensor.	5	沉水馬達連接線 Water pump.
3	排水二通閥連接線 Two way valve.	6	循環泵浦連接線 Circulation pump.

✧ 5 和 6 可以交叉使用. No. 5 and no. 6's wire is interchangeable.

沉水馬達與三通閥控制盒電源線連接

Connect the power of water pump to chilling water switch control box.




儲水槽循環泵浦與三通閥控制盒電源線連接

Connect the power of water circulation pump to chilling water switch control box.



連接完畢

The connection is completed.

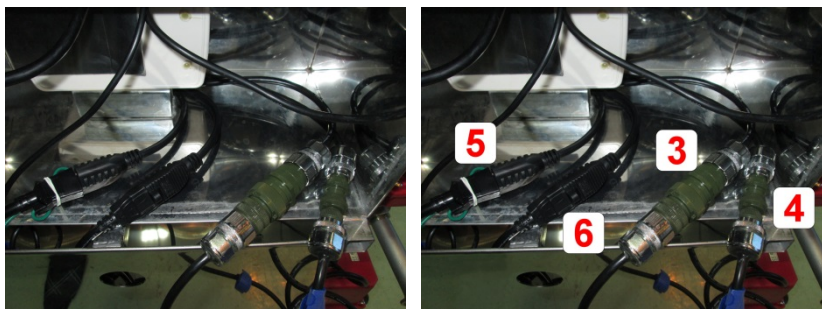

請將三通閥控制器電源線插入電源孔 Power the chilling water switch controller.

