



Demonstration of exchanging a Lift Control Panel for NE15

1. 首先，請先將損壞控制器連接線拔除。 Unplug the defect panel.

(1) 拔除升降桿線路。 Unplug the connection to Temperature and Stir Speed Control Panel.

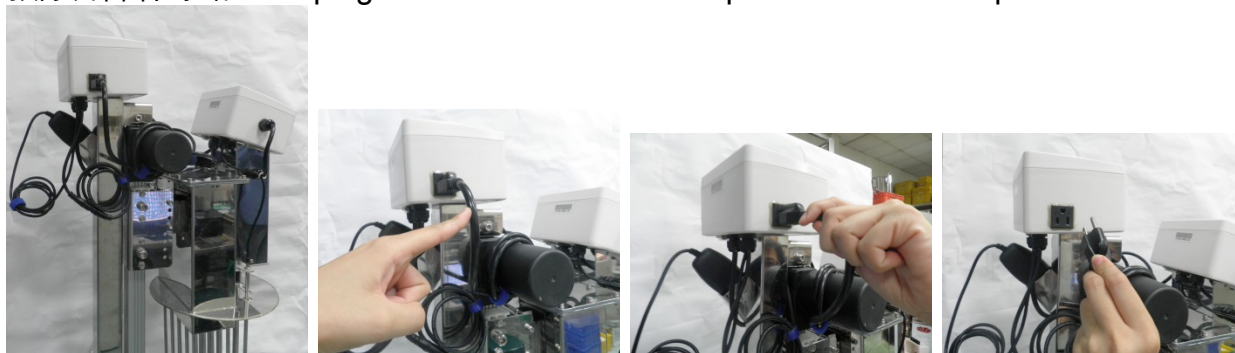


(2) 溫控攪拌器線路。 Unplug the connection to the lift.

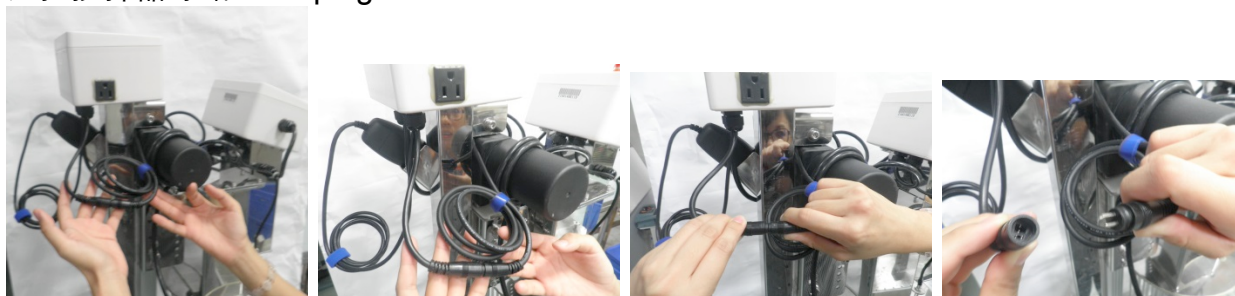

2. 將升降控制器以及控制盒取下。 Remove the panel and remote control.



3. 升降控制器組裝：請將升降控制器放置在機組最上方。 Assembly of Lift Control Panel: place the control panel in position.

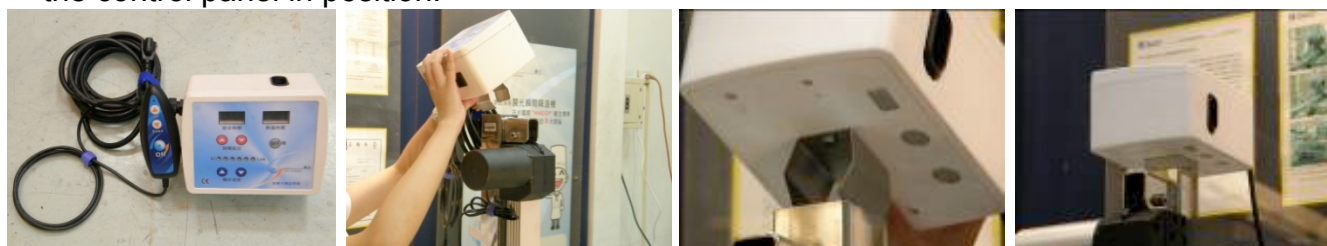

4. 將升降搖控器放入插槽。 Lay the remote control in slot.



5. 揚升桿電源線與變壓器連接。 Plug the connection to the lift.

Demonstration of exchanging a Lift Control Panel for NE15



請對齊黑色凸形三角形。 Align against the notch.



6. 將溫控攪拌器電源連接到控制器。 Plug the connection to Temperature and Stir Speed Control Panel.



7. 變壓器插上電源。 Connect Lift Control Panel with a power extension.

