

攪拌馬達組維修更換：

## Demonstration of exchanging a Temperature and Stir Speed Control Panel

先將攪拌器與變壓器連接的插頭拔出

Unplug the Temperature and Stir Speed Control Panel.



以六角板手鬆開固定螺絲

Unscrew with a No. 6 hex wrench.



直接取出整組攪拌控制器即可

Take out the broken Temperature and Stir Speed Control Panel.



換上新的攪拌器，必須對齊攪拌葉片及溫度感應針，才可放入。

Insert the stir blade and temperature probe of the new panel through the holes.



放入攪拌器後，使用工具箱中的六角板手將螺絲固定

Fasten the screws with a No. 6 hex wrench.



將攪拌器插座插入變壓器中，即完成攪拌器更換安裝

Insert the plug into Temperature and Stir Speed Control Panel. Exchange is completed.

