## 揚升桿損壞DIY維修 Demonstration of exchanging a lift





1. 請將揚升桿上升,請操作綠色控制器。 On the lift control panel:




在自動模式下
 自動
 ,按下啟動鍵
 上升。(如下圖)
 Press the upwards button within the auto mode.



- 上升至距離頂點約5~10公分處,請按OFF鍵 停止。
  Press the off button after the lift has reached a point 5 to 10 centimeter before the top.

冷卻水套已經上升,但是前側揚 升桿滑塊並沒有跟著上升。 此情形代表前側揚升桿損壞。 In the event that the slider does not ascend together with the water tank, it is a sign that the lift is broken.



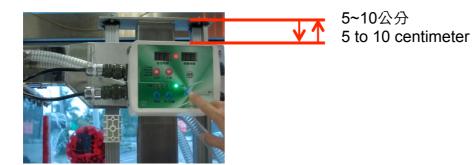

2. 將揚升桿與控制器接頭拔開,如紅色框框處。Disconnect the plug circled in red:



● <u>接頭上會標示前側或是後側揚升桿接頭</u>。Sockets are labeled with front and back.



● 請將前側接頭拔除,請旋轉後再拔除。Disconnect the plug indicated as FRONT.



- 3. 换下損壞的揚升桿。Remove the lift in question:
  - 使用工具:13號板手與6號六角板手。Tools needed: No.13 and No.6 hex wrenches.



● 鬆開螺絲。Loose the screws with wrenches.



● 將電線固定魔鬼氈鬆開 <u>• Open up the blue threads</u>.



● 換下損壞揚升桿,請向外側推出。Push out the lift in question.



- 4. 換上新的揚升桿。Replace with a new one:
  - 請先連接控制器。Plug in the socket.



再按下降鍵


操作綠色控制器並將揚升桿滑塊移動至最靠近黑色馬達處。Place the slider in the position close to the motor.

控制器操作方式: 請先按手/自動鍵 А 轉換為手動模式 手動 , 按下啟動後 ),

移動。Choose manual mode. Press start and then downwards button.



● 換上新揚升桿。Place the new lift.

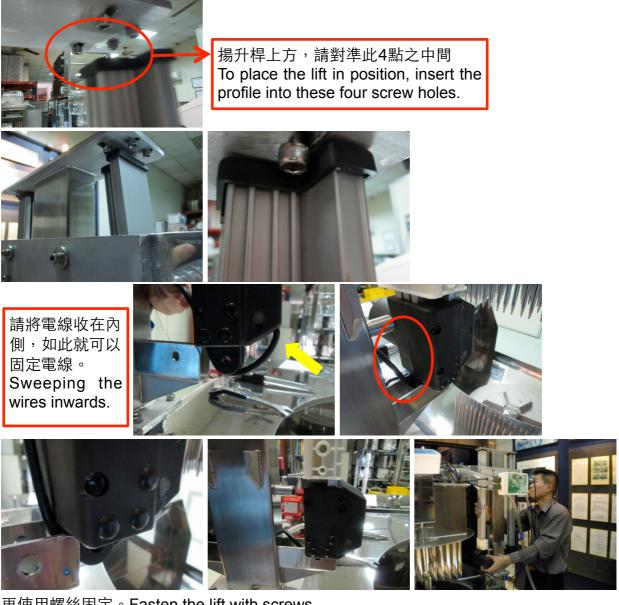

● <u>再使用螺絲固定。Fasten the lift with screws.</u>



- 使用工具:13號板手與6號六角板手,鎖緊固定後即可。Tools needed: No.13 and No.6 hex wrenches.
- 5. 定位。Initialization:

控制器操作:請選擇在手動模式
 一動
 。按下啟動鍵啟動
 , 再持續按著下降鍵

• 下降至白色滑塊完全定位置揚升桿橫桿中。Choose manual mode. Press start and then downwards button until the slider glides into the metal bar.



● 定位: Initialization



- 6. 此時可以使用自動升降模式測試揚升桿是否運作正常。Test the functionality by choosing auto mode.
- 7. 整線:請將揚升桿線使用魔鬼氈固定即完成快拆DIY維修更換。One may sweep cables together with water pipes by using the provided blue threads.

